



3450 Sabin Brown Road • Wickenburg, AZ 85390
(800) 992-3833 • mail@bnproducts.com

Parts List BNT-40 (Legacy) Automatic Rebar Tying Machine

This Tool Has
Passed ISO9001 International
Quality System Certification
The charger has passed ETL Certification




Includes motorized brake system



BN PRODUCTS-USA, LLC.

Quality Construction Tools

BNT-40 Automatic Rebar Tier

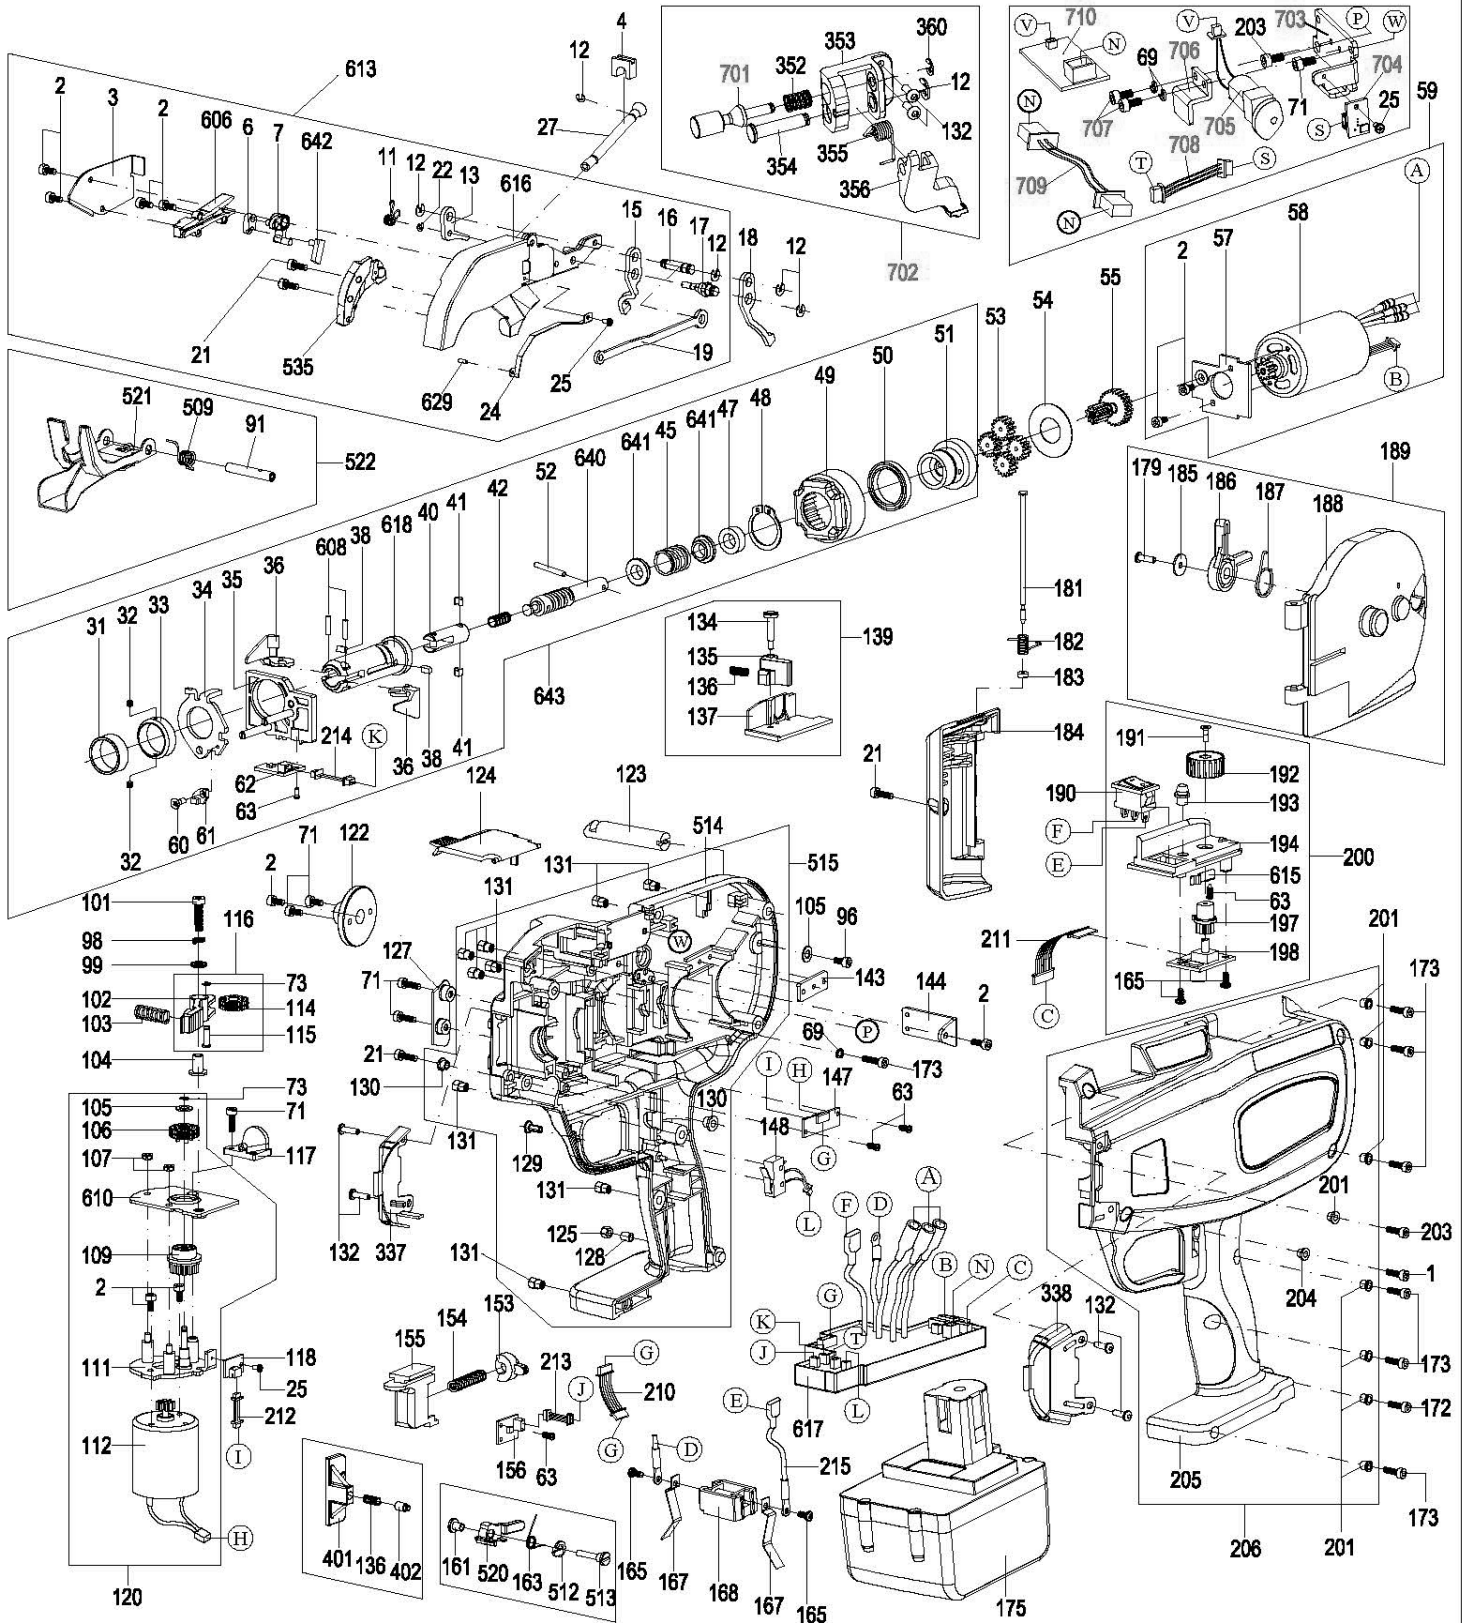

Parts List BNT-40 4/2018			
No.	Part No.	Description	Qty.
1	BNT-40-001	Hex Bolt M3×12	1
2	BNT-40-002	Hex Bolt M3×6	9
3	BNT-40-003	Cover Plate	1
4	BNT-40-004	Rubber Base	1
6	BNT-40-006	Connecting Plate 1	2
7	BNT-40-007	Cutter	1
11	BNT-40-011	Torsion Spring 1	1
12	BNT-40-012	E-Ring 4	5
13	BNT-40-013	Cutter Lever B	1
15	BNT-40-015	Cutter Lever A	1
16	BNT-40-016	Fixing Pin	1
17	BNT-40-017	Shaft Screw	1
18	BNT-40-018	Cutter Lever C	1
19	BNT-40-019	Connecting Rod 1	1
21	BNT-40-021	Hex Bolt M3×10	4
22	BNT-40-022	E-Ring 2.5	2
24	BNT-40-024	Leaf Spring	1
25	BNT-40-025	Pan-head Screw M2×4	2
27	BNT-40-027	Pipe	1
31	BNT-40-031	Sleeve Guide	1
32	BNT-40-032	Hex Screw M3×4	2
33	BNT-40-033	Cutting Ring Guide	1
34	BNT-40-034	Cutting Plate	1
35	BNT-40-035	Tip Axis Guide Assy	1
36	BNT-40-036	Hook	2
38	BNT-40-038	Key A	2
40	BNT-40-040	Tip Axis B	1
41	BNT-40-041	Key B	2
42	BNT-40-042	Comp. Spring 1	1
45	BNT-40-045	Comp. Spring 2	1
47	BNT-40-047	Bumper	1
48	BNT-40-048	C-ring 20	1
49	BNT-40-049	Internal Gear	1
50	BNT-40-050	Bearing	1
51	BNT-40-051	Planet Gauge Unit	1
52	BNT-40-052	Pin 5	1
53	BNT-40-053	Planet Gear	4
54	BNT-40-054	Gear Press Wheel	1
55	BNT-40-055	Sun Gear Unit	1
57	BNT-40-057	Motor Fixing plate	1
58	BNT-40-058	Motor 550-R2	1
59	BNT-40-059	Motor 550-R2 Assy	1
60	BNT-40-060	Countersunk screw M2×4	1
61	BNT-40-061	Magnetic Plate	1

62	BNT-40-062	Route PWB Unit	1
63	BNT-40-063	Pan-head Screw ST2.2×6	5
69	BNT-40-069	Spring Washer φ3	1
71	BNT-40-071	Hex Bolt M3×8	8
73	BNT-40-73	E-Ring 2	4
91	BNT-40-091	Stopper Shaft	1
96	BNT-40-096	SS Hex Bolt M3x12	1
98	BNT-40-098	Spring Washer φ4	1
99	BNT-40-099	Washer 2	1
101	BNT-40-101	Hex Bolt M4×16	1
102	BNT-40-102	Release Lever	1
103	BNT-40-103	Comp.Spring 3	1
104	BNT-40-104	Hollow Pin 1	1
105	BNT-40-105	Washer	3
106	BNT-40-106	Feeding Gear B1	1
107	BNT-40-107	Nut M3(T 2.4)	2
109	BNT-40-109	Feeding Gear A	1
111	BNT-40-111	Connecting Plate Unit	1
112	BNT-40-112	Motor 540-R2	1
114	BNT-40-114	Feeding Gear B2	1
115	BNT-40-115	Step Pin 1	1
116	BNT-40-116	Release Lever Assy	1
117	BNT-40-117	Wire Guide C	1
118	BNT-40-118	Feeding PWB unit	1
120	BNT-40-120	Motor 540-R2 Assy	1
122	BNT-40-122	Reel Guide	1
123	BNT-40-123	Joint Reel Magazine	1
124	BNT-40-124	Window	1
125	BNT-40-125	Nut M3 (T4)	1
127	BNT-40-127	Strength Plate	1
128	BNT-40-128	Hollow pin 6	1
129	BNT-40-129	Cross head tapping screw ST2.2 × 7	1
130	BNT-40-130	Hollow Pin 3	2
131	BNT-40-131	Nut M3	8
132	BNT-40-132	Hex Bolt M3×8	6
134	BNT-40-134	Step Pin 2	1
135	BNT-40-135	Release Stopper	1
136	BNT-40-136	Comp. Spring 4	2
137	BNT-40-137	Reel Stopper	1
139	BNT-40-139	Reel Stopper Assy	1
143	BNT-40-143	Fixing Plate 1	1
144	BNT-40-144	Fixing Plate 2	1
147	BNT-40-147	Motor 540-R2 PWB Unit	1
148	BNT-40-148	Trigger Switch	1
153	BNT-40-153	Trigger Lock	1

154	BNT-40-154	Comp. Spring 5	1
155	BNT-40-155	Trigger	1
156	BNT-40-156	Sensor PWB D Unit	1
161	BNT-40-161	Pin 4	1
163	BNT-40-163	Torsion Spring 4	1
165	BNT-40-165	Pan-head Screw ST3×8	4
167	BNT-40-167	Electrode Plate	2
168	BNT-40-168	Electrode Block	1
172	BNT-40-172	Hex Bolt M3×16	1
173	BNT-40-173	Hex Bolt M3×14	8
175	BNT-40-175	Li-ion Battery	1
179	BNT-40-179	Pan Head Screw M3×5	1
181	BNT-40-181	Step Pin 3	1
182	BNT-40-182	Torsion Spring 5	1
183	BNT-40-183	Rubber Washer	1
184	BNT-40-184	Motor Cover	1
185	BNT-40-185	Washer 3	1
186	BNT-40-186	Reel Stopper	1
187	BNT-40-187	Torsion Spring 6	1
188	BNT-40-188	Real Stay	1
189	BNT-40-189	Real Stay Assy	1
190	BNT-40-190	Main Switch Unit	1
191	BNT-40-191	Countersunk ScREW M3×5	1
192	BNT-40-192	Adjusting Knob	1
193	BNT-40-193	LED Unit	1
194	BNT-40-194	Adjusting Plate	1
197	BNT-40-197	Joint Knob	1
198	BNT-40-198	Adjusting PWB Unit	1
200	BNT-40-200	Main Switch Base Assy	1
201	BNT-40-201	Hollow Pin 7	7
203	BNT-40-203	Hex Bolt M3×18	2
204	BNT-40-204	Hollow Pin 5	1
205	BNT-40-205	Frame R	1
206	BNT-40-206	Frame R Assy	1
210	BNT-40-210	Motor 540-R2 Connecting Wire	1
211	BNT-40-211	Adjusting Connecting Wire	1
212	BNT-40-212	Feeding Connecting Wire	1
213	BNT-40-213	Sensor Connecting Wire	1
214	BNT-40-214	Rotating Connecting Wire	1
215	BNT-40-215	Battery Connecting Wire	1
337	BNT-40-337	Cover L Unit	1
338	BNT-40-338	Cover P Unit	1
352	BNT-40-352	BN Pin Spring	1
353	BNT-40-353	BN Brake Guide	1
354	BNT-40-354	BN Brake Pin	1

355	BNT-40-355	BN Solenoid Spring	1
356	BNT-40-356	BN Reel Press A	1
360	BNT-40-360	E-Ring 3	1
401	BNT-40-401	Jaw	1
402	BNT-40-402	Jaw Pin	1
509	BNT-40-509	Curl Guide Spring	1
512	BNT-40-512	Switch Lever Washer	1
513	BNT-40-513	Switch Lever Block	1
514	BNT-40-514	Frame L	1
515	BNT-40-515	Frame L Assy	1
520	BNT-40-520	Switch Lever	1
521	BNT-40-521	Curl Guide	1
522	BNT-40-522	Curl Guide Assy	1
535	BNT-40-535	Wire Guide A	1
606	BNT-40-606	Wire Guide B	1
608	BNT-40-608	Fixing Axis	2
610	BNT-40-610	Partition Plate	1
613	BNT-40-613	Arm A unit Assy	1
615	BNT-40-615	Adjusting Spring	1
616	BNT-40-616	Arm A unit	1
617	BNT-40-617	Main PWB Unit	1
618	BNT-40-618	Sleeve A	1
629	BNT-40-629	Leaf Spring φ1.8×5.5	
640	BNT-40-640	Tip Axis A	1
641	BNT-40-641	Pin 1	2
642	BNT-40-642	Fixed Cutter	1
643	BNT-40-643	Twister Assy	1
701	BNT-40-701	BN Pin 9	1
702	BNT-40-702	BN Brake Housing Assy	1
703	BNT-40-703	Fixing plate 3	1
704	BNT-40-704	Braking Motor PWB 1	1
705	BNT-40-705	Braking Motor Assy	1
706	BNT-40-706	Fixing plate 4	1
707	BNT-40-707	Hex Bolt M3×5	1
708	BNT-40-708	Braking Motor PWB 1 Connecting Wire	1
709	BNT-40-709	Braking Motor PWB 2 Connecting Wire	1
710	BNT-40-710	Braking Motor PWB 2	1
		Battery charger	1

