



**BN PRODUCTS-USA, LLC.**

A Division of Benner-Nawman, Inc.


## BNT Series Brake Maintenance



1. You will need light grease (NLGI-1 or 2), an applicator, compressed air, or a brush



2. Clean the brake housing with compressed air or a brush

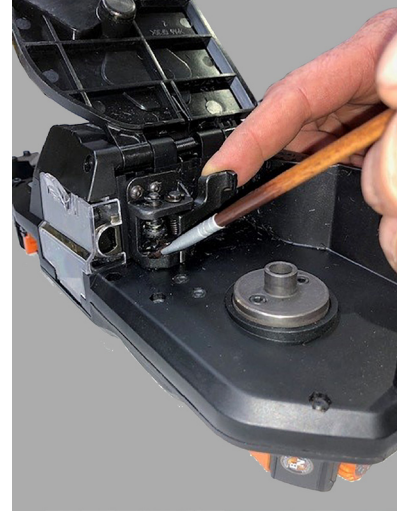

3. Hold the brake lever (reel press A) out while applying grease to the upper and lower points on the plunger (reel press axis). Some lubrication on the center axis is helpful. Spray lubrication is not recommended. If used, it should only be done sparingly because it can penetrate the case and get into the internal electronics of the tool.



**DO NOT** lubricate the wire feed gears