



BN Products-USA™

A DIVISION OF BENNER-NAWMAN, INC.

HB-16W

Hydraulic Rebar Bender


Customer Service (800) 992-3833

**ELECTRIC / HYDRAULIC
REBAR BENDER**

OPERATOR MANUAL

HB-16W

115V AC / 10A

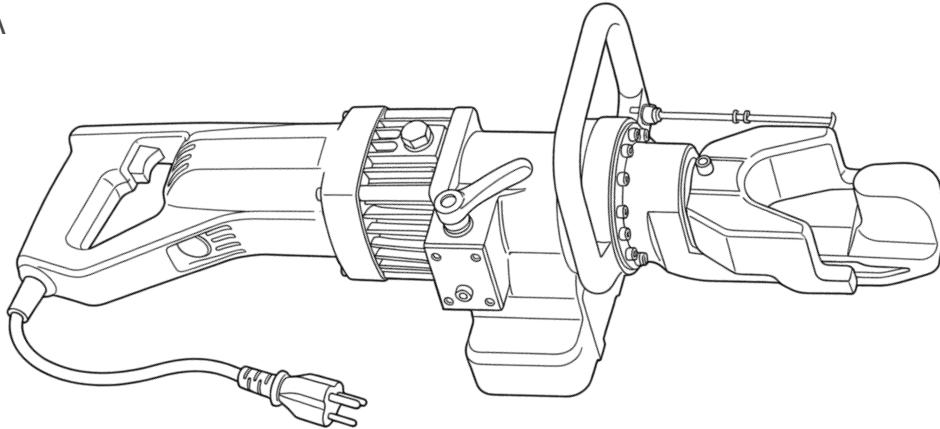

REBAR BENDER OPERATOR INSTRUCTIONS

**READ THESE INSTRUCTIONS CAREFULLY BEFORE
ATTEMPTING TO USE THIS REBAR BENDER**

Not following proper operating procedures can lead to accidents.
If in doubt of any procedure, contact your local authorized agent.

The HB-16W is a portable Electric/hydraulic rebar bender. It helps save valuable man-hours by cleanly and efficiently bending rebar in place or in a shop environment. This power tool is designed for bending Grade 60 rebar up to a 5/8" (16 mm) diameter (#5) from 0-135°.

An accessory bending shoe is available to create 90° bends without a guide, increasing the bending radius and minimizing the risk for rebar breakage.




BN Products-USA™

3450 N. Sabin Brown Road • Wickenburg, AZ 85390

(800) 992-3833 • mail@bnproducts.com

Website: www.BNProducts.com

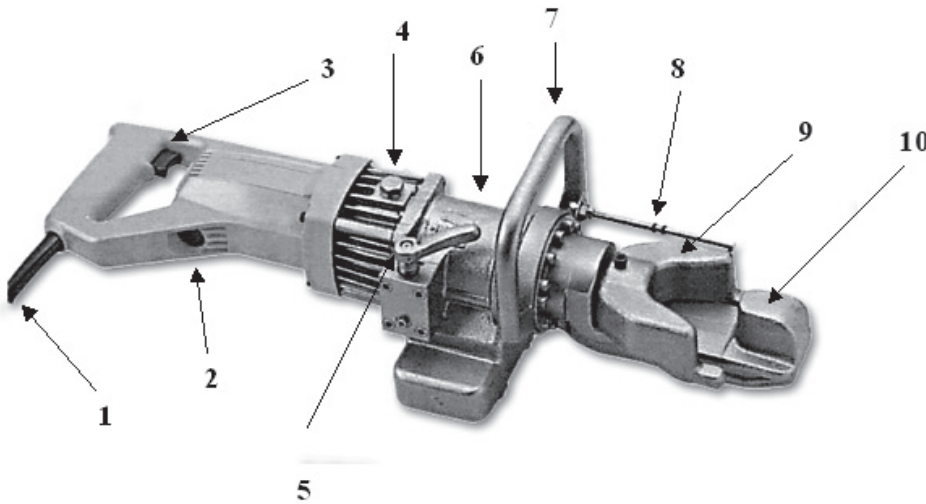

1. Electric cord
2. Electrical brush
3. On/Off switch
4. Oil plug
5. Valve lever
6. Hydraulic cylinder
7. Carrying handle
8. Bending angle marker
9. Pivot shoe
10. Housing

IMPORTANT SAFETY PRECAUTIONS

- Keep hands away from pivot shoe while operating.
- Disconnect tool from socket when not in use and before servicing.
- Maximum number of bar that can be bent at one time: Grade 60 or equivalents.

IMPORTANT – Do not exceed the maximum number of bars that can be bent at

Diameter of bar	3/8" (10mm)	1/2" (13mm)	5/8" (16mm)
Number of bars	3 Pieces	2 Pieces	1 piece

IMPORTANT – Do not try to bend materials that exceed the maximum diameter of bar, or it will cause either the motor to burn out or a machine failure.

- The machine will only operate on the voltage for which it is designed (with a tolerance of 10%). 115 Volt, 50/60 Hz, 10 amps, 1050 watts
- To avoid electrical shock, do not handle with wet hands or use in a damp place.



BN Products-USA™

A DIVISION OF BENNER-NAWMAN, INC.

HB-16W

Hydraulic Rebar Bender

Customer Service (800) 992-3833

General Safety Rules

WARNING: Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term “power tool” in all of the warnings listed below refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

SAVE THESE INSTRUCTIONS

Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable to outdoor use. Use a cord suitable for outdoor use reduces the risk of electric shock.

Personal safety

- Keep hands and fingers away. From all moving parts, cutting blocks and rollers while operating these power tools.
- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust-related hazards.

Power tool use and care


- Do not exceed the maximum number of bars that can be bent and or cut at one time. Refer to additional information contained in these instructions.
- When positioning the bar between the bending rollers or cutting blocks, make sure to lay it flat on the machine surface. Refer to additional information contained in these instructions.

- Do not cut or bend materials harder than and or other than “Grade 60 or 420MPa” rebar. As they will either crack or fly out or cause machine failure.
- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventative safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tools or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding or moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

Service

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- Keep tool clean at all times for best and safest performance. Follow these instructions for lubricating and changing parts. Keep hands dry and free of oil or grease. Inspect switches, tool cords periodically and have them repaired or replaced by an authorized service center if damaged. Check moving parts for alignment and binding as well as for breakage and improper mounting. Damaged parts should be repaired or replaced by an authorized service facility.


Operating the HB-16W Rebar Bender

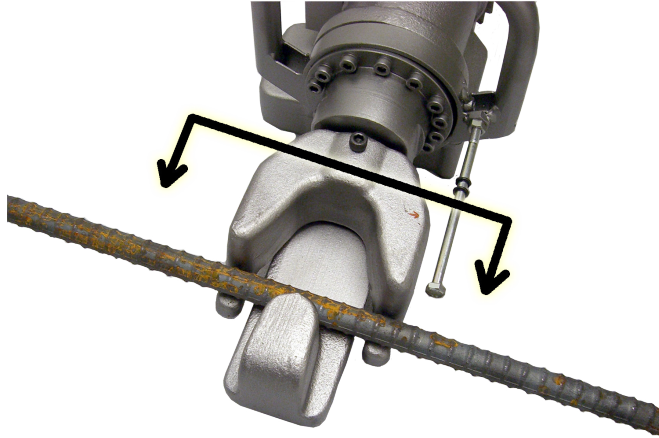

1) Insert rebar(s) in between the pivot shoe and housing so that the rebar is at right angles to the pivot shoe/housing.



2) Throttle the on/off switch until the rebar has reached your required angle.

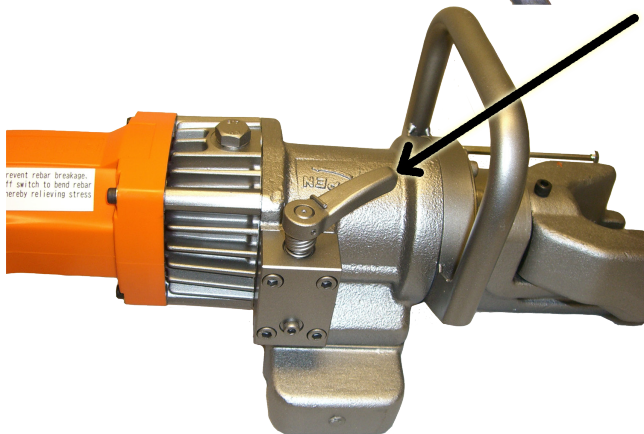

3) After the bend, release the on/off switch and turn the valve lever to the open position to return the piston to the starting position. The piston will not return automatically when the on/off switch is released.



BN Products-USA™

A DIVISION OF BENNER-NAWMAN, INC.


HB-16W

Hydraulic Rebar Bender

Customer Service (800) 992-3833

HB-16W Rebar Bender Maintenance

OIL CHECK: The HB-16W is hydraulically operated. It is therefore necessary to check the oil level at frequent intervals, preferably every day. If oil level is too low, power will drop and the piston will not move properly.

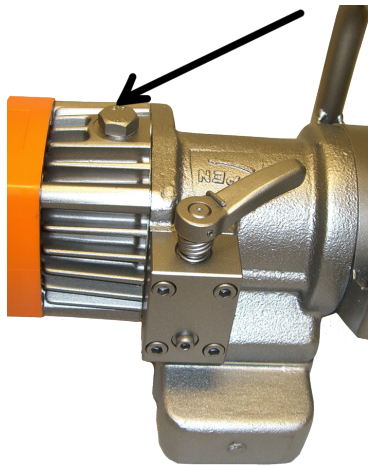

- Extend the piston to the fullest extent of its stroke.
- Remove oil plug bolt. Only remove the plug when the unit is cool (if it is hot, oil may spurt out suddenly.)
- The pump case should be full to the brim. If the level is low, top up with Texaco Rando HD 68 hydraulic oil or equivalents. This is a 20-weight hydraulic oil with anti-foam and anti-abrasion properties. Do not use any other oil.
- It is imperative that there be no air in the system. After topping up, gently tilt the unit and return the tool to the level position. Top up again and tilt in the opposite direction. Repeat this process until all air has been extracted. (This is a rather lengthy process, but it is essential to proper functioning on the unit.)


OPERATING TEMPERATURE: Do not allow the unit to overheat. If the oil temperature exceeds 70 degrees Centigrade or 158 degrees Fahrenheit, the piston speed will fall and the unit should be allowed to cool down before being used again.

Optional Shoe and Collar for HB-16W Portable #5 Rebar Bender

Optional 90 degree Bending Shoe (IHB16041A)
and Larger Radius Bending Collar (IHB3107800)

How to install 90 degree Bending Shoe and Larger Radius Bending Collar:

1. Simply remove the (#8) bending angle marker and (#9) standard 0-135 degree pivot shoe (refer to HB-16W handling instructions).
2. Attach 90 degree bending shoe to piston/ring and tighten cap bolt.
3. Slide larger radius bending collar over housing bending horn and tighten cap bolt (this will minimize breakage on grade 60 rebar).
4. Place rebar flat and level between shoe and collar before starting bend.
5. Pull the (#3) on/off switch until the piston/shoe cannot extend any further, once the rebar is bent to 90 degree; do not continue to keep the switch in the "on" position and the motor running because this will cause internal tool damage.
6. After completing bend immediately switch "off" and retract (#5) valve lever, remove bent rebar and repeat this process.

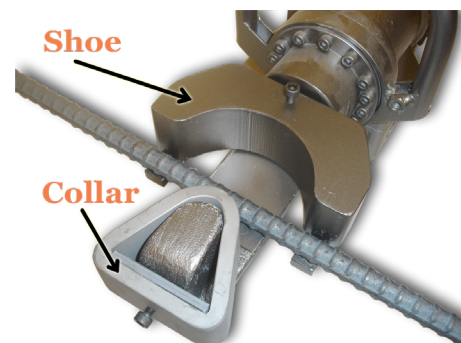



BN Products-USA™

A DIVISION OF BENNER-NAWMAN, INC.

HB-16W

Hydraulic Rebar Bender

Customer Service (800) 992-3833

ONE-YEAR LIMITED MANUFACTURER WARRANTY

BN Products-USA™ warrants each tool to the original purchaser to be free of defects in materials and workmanship under everyday and appropriate use and service for one year. Use the applicable QR code or web URL below to access our full One-Year Warranty policy and procedure, or to complete a Warranty Service Request for this product.

If you are requesting Warranty Service, it is recommended that you have your original purchase order available to upload or scan using a mobile device. Questions with regard to our One-Year Limited Manufacturer Warranty may be directed to BN Products-USA™ Customer Service at (800) 992-3833.

SCAN 	ONE-YEAR LIMITED WARRANTY https://www.bnproducts.com/one-year-product-warranty/ 		REQUEST WARRANTY SERVICE ONLINE https://www.bnproducts.com/warranty-request/ 
--	---	---	--



BN Products-USA™

3450 N. Sabin Brown Road | Wickenburg, AZ 85390

(800) 992-3833 | www.BNProducts.com

THE MOST TRUSTED NAME IN REBAR TOOLS